

HOW DO I KNOW WHAT SIZE TIRE MY VEHICLE USES?

There are a few different ways you can find out.

A) You can inspect the tires that are currently on the vehicle and read the numbers embossed on the sidewall. Be sure to check front and rear, as some vehicles use different sizes on the same vehicle.

The numbers will appear in a format such as this:




Here, the **205** represents the tire width in millimeters. The **50** represents the tire's sidewall aspect. This number is a percentage of the width. In this case this sidewall is 50% of the width of the tire.

The final number is the **R15** (in some cases, such as this, ZR is used to indicate this is a performance tire).

This represents the diameter of your rim/wheel in inches.

B) Another way you can find out what size tires your vehicle requires is on the inside of the driver's door. See the photos below for reference.

This photo shows where you will find the sticker/tag with your vehicle's information.

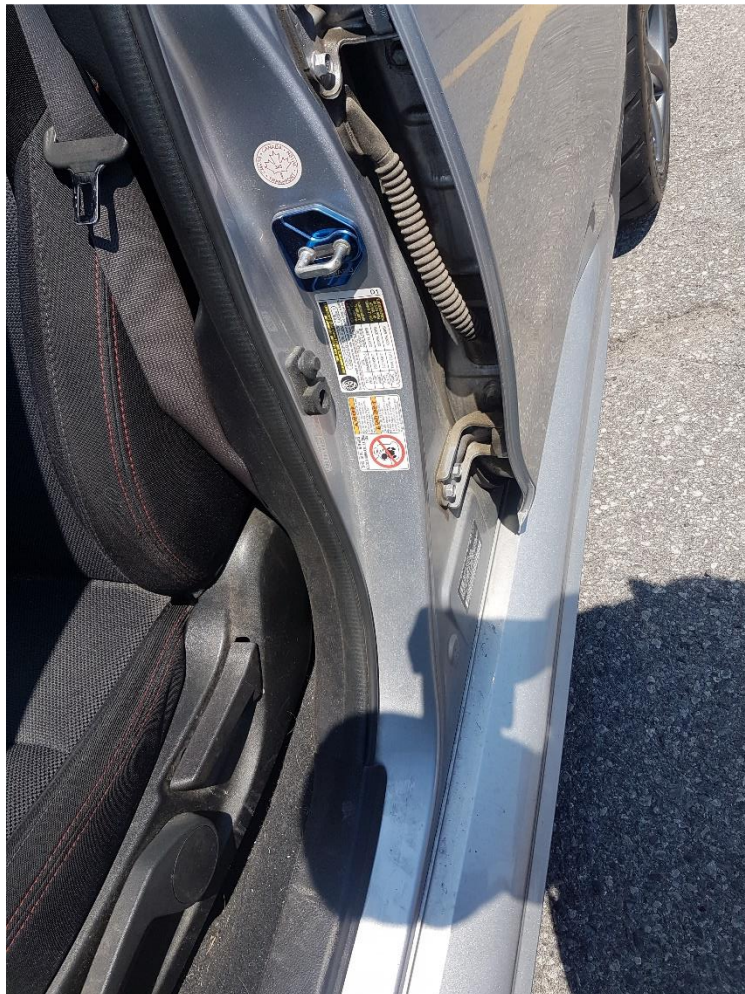

This photo is a closer look at the tag/sticker. Here you will find your wheel dimensions, and tire size, as well as what tire pressure your vehicle should have.



If you have any questions please feel free to contact us! We will help you out however we can!



